



**WARNING:** Please read the *Important Safety Instructions* section of the **Discovery Wall Oven Use Care Manual** before operating your oven.

*Welcome...*

to the world of **dacor** cooking!

Here's How to Start Using Your New Oven...  
...Right Now!

WALL OVEN QUICK START GUIDE

**1** If you have a double oven, select the oven you want to use by pressing UPPER or LOWER.

**2** Select the way you want to cook the food using one of these keys.

**3** Select the cooking temperature\*. For example: press 3, then 2, then 5, for 325°F.

**4** Press START.

If you have a double oven, press **UPPER** or **LOWER** to turn an oven off.

If you have a single oven, press **CANCEL/SECURE** to turn off your oven.

*It's that easy!*

\* Skip this step if the temperature already showing on the display is what you want.

# WALL OVEN QUICK START GUIDE

## About...

### The Control Panel

#### IF THE CONTROL PANEL IS NOT LIT:

Press any key on the control panel or open the door to "wake" the display.

#### START Key

Press start after selecting the cooking function and setting the temperature.

#### Display Panel

Display screen changes when the variable function keys are pressed to describe available options and oven operations.

#### Number Keypad

Use to set the temperature, time and date, etc.

#### CANCEL/SECURE Key

Single Ovens: Press to turn the oven off.  
Double ovens: Press to turn off both ovens. Also returns display to home screen on both double and single ovens.

#### UPPER & LOWER ON/OFF Keys

Double oven only: Use to turn the upper & lower ovens on and off.

#### TIMER Key

Press to access the oven's 2 timers.

#### BACK/RECALL Key

Returns the display to the previous "screen".

#### Variable Function Keys

Use to select the cooking functions, change the control panel settings, etc. Available options change based on the screen shown on display.

#### Light Key

Use to turn the oven lights on and off when the oven door is closed.

